



## Tusk UTV Rear Window Instructions Polaris RZR XP 1000 and XP4 1000

*Thank you for purchasing the Tusk UTV Rear Window. Please read through all the instructions and examine the rear window to become more familiar with the straps and buckles used for mounting.*

**1.** Position the Tusk UTV Rear Window on the back (outside) of the roll cage with the window stitching and female buckles facing inward toward the cockpit. Attach the two Velcro straps on the top horizontal roll bar (see fig. 1).




**2.** Attach the top corners of the rear window. Wrap the material around the bend in the roll cage and attach each strap as shown in figure 1. Leave straps loose.

**3.** Remove the seats for easy access to the back panels/engine cover. Position the bottom of the rear window between the seats and engine cover (see fig. 2).



**4.** Loop the upper side straps (located near the seatbelt mounting bracket) around the seat belt mounting bracket as seen in figure 3. Thread the strap back through the buckle on the rear window (see fig. 4). Leave somewhat loose at this point.

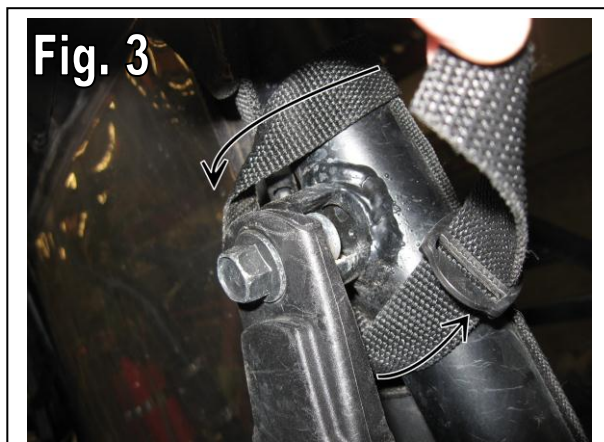


5. Route the lower side straps around the B-pillar, around the horizontal harness bar and back around the B-pillar (see fig. 5). Thread the strap through the buckle (see fig. 6). Leave straps loose.



6. Next, route the bottom corner straps down around the base of the B-pillar and under the bar that the door hinges on. Thread strap through buckle as seen in figure 7. Leave straps somewhat loose for now.



7. Unbuckle the two straps with the plastic hooks attached to them on the bottom of the rear window. Slide the plastic hooks under the back panel/engine cover (see fig. 8). Align the strap with the female buckle on the rear window. Reinsert the male buckle in the female buckle. Leave somewhat loose for now. **Tip:** It may help to loosen the four Torx head screws that attach the plastic back panel/engine cover (see fig. 9).

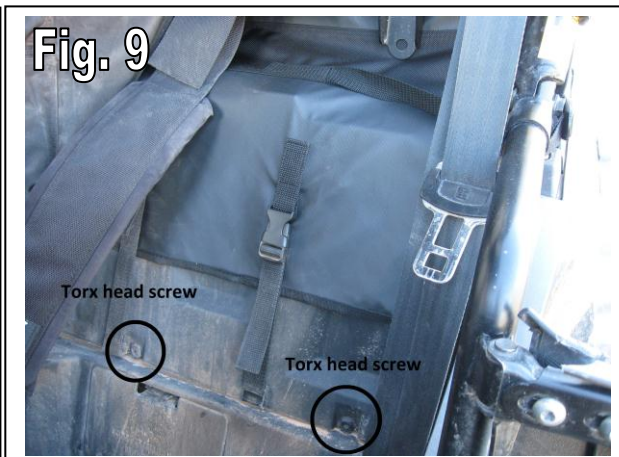



8. Start with the top corner straps and evenly tighten each strap. Work your way from top to bottom and tighten all straps. Reinstall your seats. Check your work and be sure everything is tight and secure. You are now ready to ride with your new Tusk Rear Window!

***Warning:*** To ensure the longevity of the Tusk Rear Window, it is recommended the window is removed during transportation.

