

# Tusk Poly Carb Half Windshield Can Am X3

Part#1868600001

Part #1868600002



Thanks for your purchase of the Tusk half windshield. It is a great addition to any side-by-side vehicle. I front half windshield does a great job of protecting your from the elements.

***Assembly:*** Before you throw any packaging away, make sure you received all the necessary hardware:

## **Contents**

- 1-Half poly carb window
- 2-Velcro roll cage clamps
- 2-M6 hand knobs
- 2-M6 J-nuts
- 6ft-Foam tape

## **Vehicle Fitment**

- 2017-2018 Can Am X3
- 2017-2018 Can Am X3 Max



M6 J-nut (2)




Velcro Roll Cage Clamp (2)



M6 hand knob (2)



Foam tape (6 LF)

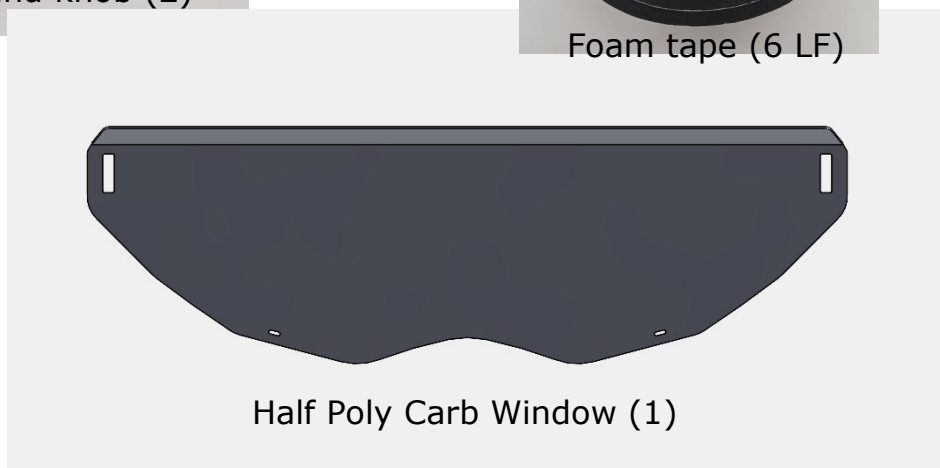


Half Poly Carb Window (1)

# Tusk Poly Carb Half Windshield Can Am X3

1. Locate and remove the four screws on the dash that secure the cowling (2 on the left and 2 on the right). This will allow you to install the J-nuts in the dash.
2. Using a 3/8" drill bit, drill a hole in the outer most dimple and install the (2) supplied J-nuts in the dash.
3. Reinstall the previously removed cowling screws.

Remove these screws

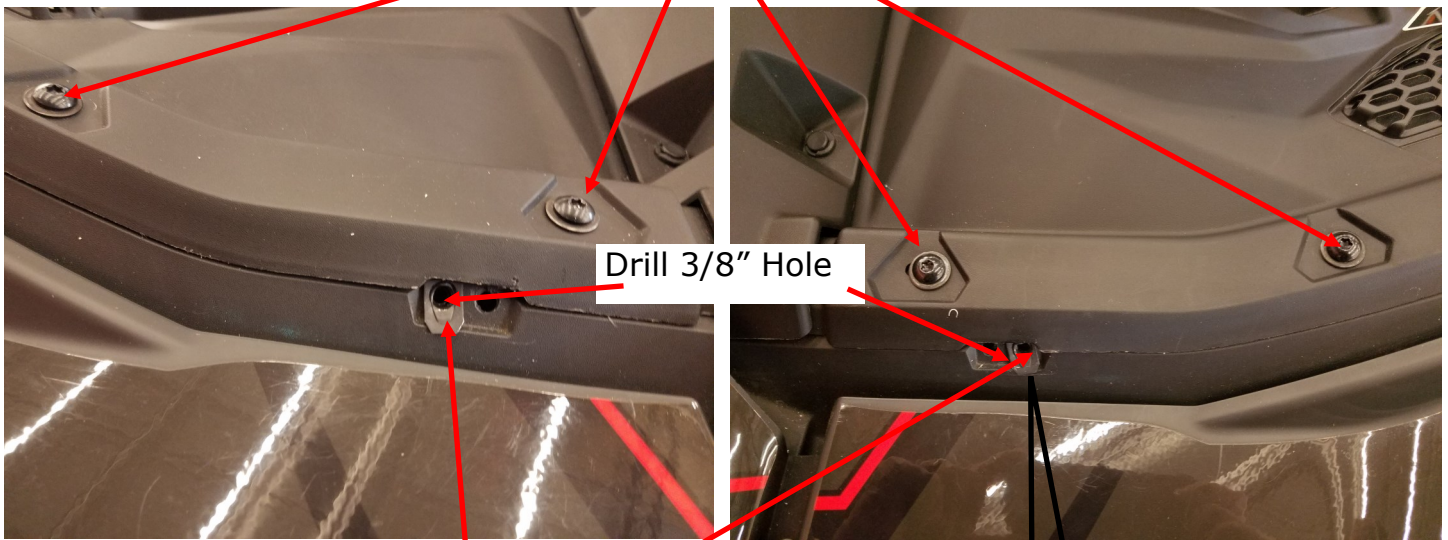


Passengers side

Drivers side



## Tusk Poly Carb Half Windshield Can Am X3

4. Place your Tusk windshield on a clean smooth surface and remove the protective film from the inside of the window.
5. Locate your supplied foam tape and install the tape as shown in the image below. Make sure you do not cover the holes in the bottom of the window.

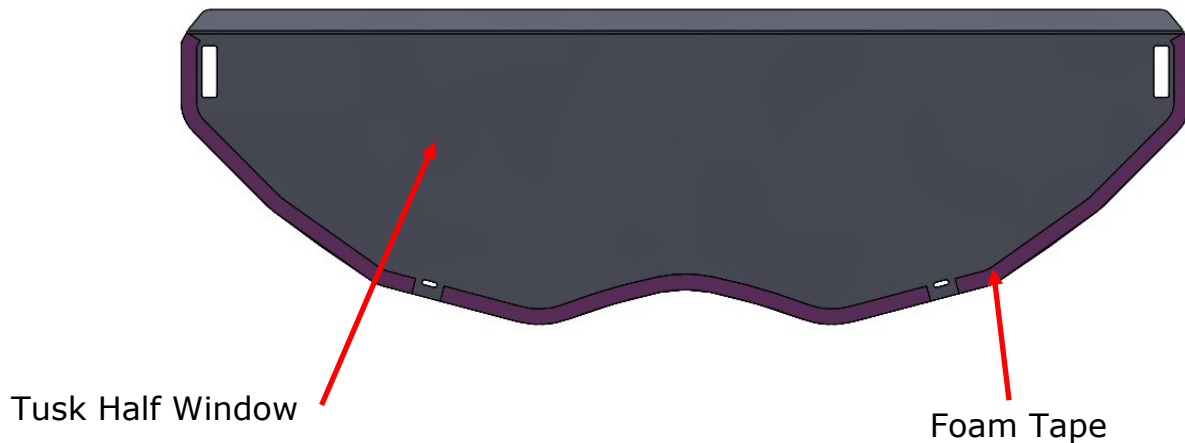

6. Remove the protective film from the other side of the window and place the window on your machine. Install the (2) supplied hand knobs in on the bottom of the window and loosely tighten. Install the two supplied Velcro clamps to the roll cage. **See images below.** Enjoy your new Tusk half window!

