## Tusk Cargo Rack

Part Number: 1882990012

Polaris Pro XP

Thank you for purchasing the Tusk Cargo Rack. Please take note of the information and instructions below to get the most out of your Tusk product.



Attention: Before you throw any packaging away, make sure you received all the necessary hardware.



(4) M8 x 20MM Button **Head Bolt** 



(8) Flange Nyloc Nut



(4) M8 x 20MM Washer




(2) Cooler Ratchet Strap



(4) Low Profile Clamp



(4) M8 x 70mm Bolt





(1) LH Side Bracket



(1) RH Side Bracket

Hardware:

1 - Cargo Rack
1 - LH Cargo Rack Side Bracket
1 - RH Cargo Rack Side Bracket
4 - M8 x 20mm Button Head Bolt
8 - M8 Flange Nyloc Nut
4 - M8 x 20mm Washer
4 - 2" Low Profile Clamp with 70mm Bolt
2 - Cooler Ratchet Strap

(1) Cargo Rack

Installation:

Note: A little bit of tape can help reduce scratching of the roll cage during installation. All tape must be removed for proper assembly. roll cage during installation. All proper assembly.



1. Lightly attach 2 of the Low Profile Clamps on each side of the


roll cage (Discarding the provided locking washer). The bottom clamp will face upward while the top clamp will face downward. FIG 1, 2, 3, 4



- Install the Side Brackets (LH & RH) onto the Low Profile Clamps using the M8 Bolt and Nyloc Nut. Keep these bolts loose enough to adjust the level of the rack at the end. FIG 3,4
- Slide the Cargo Rack between the two Side Brackets, align the slotted holes on the Cargo Rack to the Side Brackets to your desired position. FIG 5
- 7. Place the M8 x 20MM Button Head Bolt through the M8 x 20MM Washer, then the Cargo Rack and the Side Bracket. Tighten down with a M8 Nyloc Nut. FIG 5
- 8. Once centered and leveled to desired position, tighten all remaining hardware.






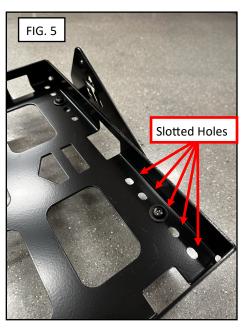

\*\*Be sure to check all hardware for tightness periodically!\*\*



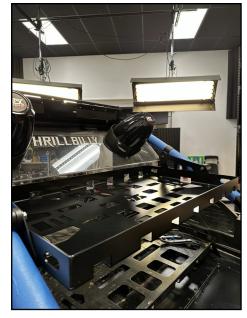



**Enjoy the use of your new Tusk Cargo Rack!**