

Tusk Accent Light Instructions:

Part#2070460004

Machine Fitment: 2021+ Can-Am Defender, 20+ Commander



Thank you for purchasing the Tusk Accent Light Kit. Please take note of the information and instructions below to get the most out of your Tusk product!

Assembly: *Before you throw any packaging away, make sure you received all the necessary hardware:*

Includes:

- (1) - LH Accent Light
- (1) - RH Accent Light




(1) - LH Accent Light

(1) - RH Accent Light

Installation Instructions:

1. Unplug the OEM accent lights. **FIG 1**
2. Unscrew the brass screw holding the headlight into the accent light housing. **FIG 1**
3. Unscrew the 8mm bolt using a ratcheting end wrench. **FIG 1**
4. Using a flathead screwdriver, lightly pry the tab slots on the accent lights open to remove the tabs. **Fig 1**
5. Removing the accent light may be difficult to do because of the headlight inference. Removing the accent light at an upward angle will allow you to squeeze by the headlight. **FIG 2**
6. Install the new Tusk Accent Light by reversing steps 1-5.
7. Plug in the new accent light into the 2-Pin connector.

(Note: The yellow 3mm Bullet connector can be used with the Tusk Signal and Horn Kit. Plugging in this yellow connector will turn your accent lights into signal lights.)

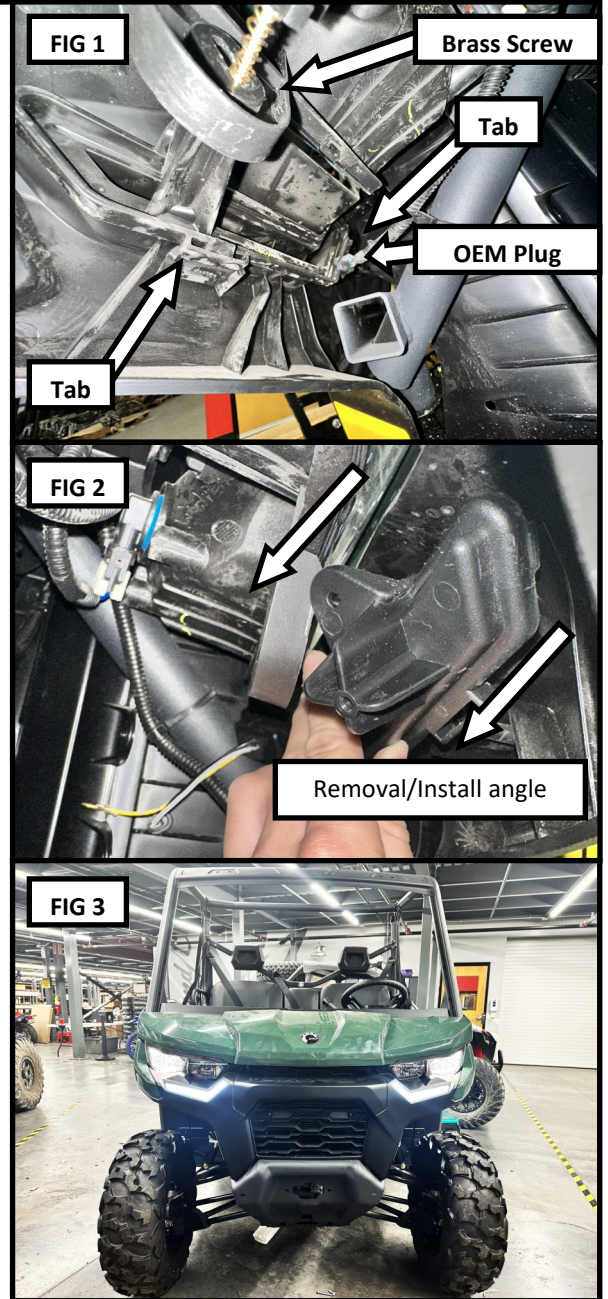

Enjoy the use of your new Tusk Accent Lights!